

BRAKE INSPECTION


MA005-01

1. INSPECT BRAKE LINE PIPES AND HOSES

HINT:

Inspect in a well-lighted area. Inspect the entire circumference and length of the brake hoses using a mirror as required. Turn the front wheels fully right or left before inspecting the front brake.

- (a) Check the all brake lines and hoses for the Damage.
- (b) Check the all brake lines and hoses for the Wear.
- (c) Check the all brake lines and hoses for the Deformation.
- (d) Check the all brake lines and hoses for the Cracks.
- (e) Check the all brake lines and hoses for the Corrosion.
- (f) Check the all brake lines and hoses for the Leaks.
- (g) Check the all brake lines and hoses for the Bends.
- (h) Check the all brake lines and hoses for the Twists.
- (i) Check all clamps for tightness and connections for leakage.
- (j) Check that the hoses and lines are clear of sharp edges, moving parts and the exhaust system.
- (k) Check that the lines installed in grommets pass through the center of the grommets.

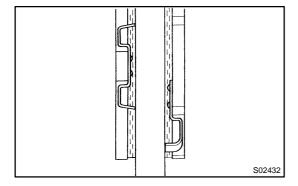

2. INSPECT FRONT BRAKE PADS AND DISCS (See page BR-13 and BR-18)

HINT:

If a squealing or scraping noise occurs from the brake during driving, check the pad wear indicator.

If there are traces of the indicator contacting the disc rotor, the disc pad should be replaced.

 INSPECT REAR BRAKE LININGS AND DRUMS (See page BR-24)

2002 4RUNNER (RM887U)

Author: Date: 46